

RF RGBW PROGRAMMABLE LED CONTROLLER

Catalog #		Type
Project		Date
Prepared by		

SPECIFICATIONS

Operation Voltage..... 4.5V (3xAAA battery)
 Operation Frequency..... 868MHz
 Dimensions..... 4.72" x 2.17" x 0.67" (L120mm x W55mm x H17mm)

MODEL #	LB2819
----------------	--------

Features and benefits:

- 4 zones/areas
- RGBW controller



BRIEF INTRODUCTION OF BUTTONS

Program: click this button, then touch the color wheel to choose at least 2 colors (most 7 colors), then click this button again, the connect lights will run with the color which you choose. Now you can use with button ▶ to change the running mode or speed

Indicator: indicate the state of remote control

Color wheel

4 zones, click to choose zone, hold to turn off/on that zone

Hold to dim up/down the RGB channels

Click to switch the running mode: jump, flash, fade, strobe. Hold to change the running speed

ON/OFF of all zones

RGB mixed white: cw, nw, ww

Hold to save the color/effect. Click to call up the saved color/effect

The white channel: click to turn on/off, hold to dim up/down

Note : This remote controls 4 zones (areas) receivers, each zone can pair with countless receivers. 1 receiver can be paired by max 8 different remote controls.

OPERATION

- 1. Pair with RF receivers:**
 - Turn on RF remote → Click "Learning Key" on RF receiver → Click a zone number on RF remote → touch color wheel on RF remote, led lights flicker twice means well paired
- 2. Play the remote after pairing:**
 - Turn on RF remote → Click the paired zone number/numbers → touch color wheel or other buttons to do the controlling.
- 3. Program a RGB effect colors**
 - Turn on RF remote → Click a zone button to control that zone → Click button "P" → Choose color on (2-7 colors)
 - If you like the effect, just hold S1/S2/S3 to save it ← Click button "▶" to change the effect ← Click button "P" again, the lights will play the effect
- 4. Save color/scene:**
 - Turn on RF remote → Click the paired zone number/numbers → select a color from → Hold S1/S2/S3 until light flash twice
- 5. Call up the saved:**
 - Select zone button which we want to call up, then click save button S1, S2, S3.
- 6. How to delete the pairing:**
 - Power on the RF receiver, hold the "Learning Key" over 3 seconds until connected led lights flicker twice means well deleted.

