


RF 5 CHANNEL RECEIVER Installation Guide

INTRODUCTION

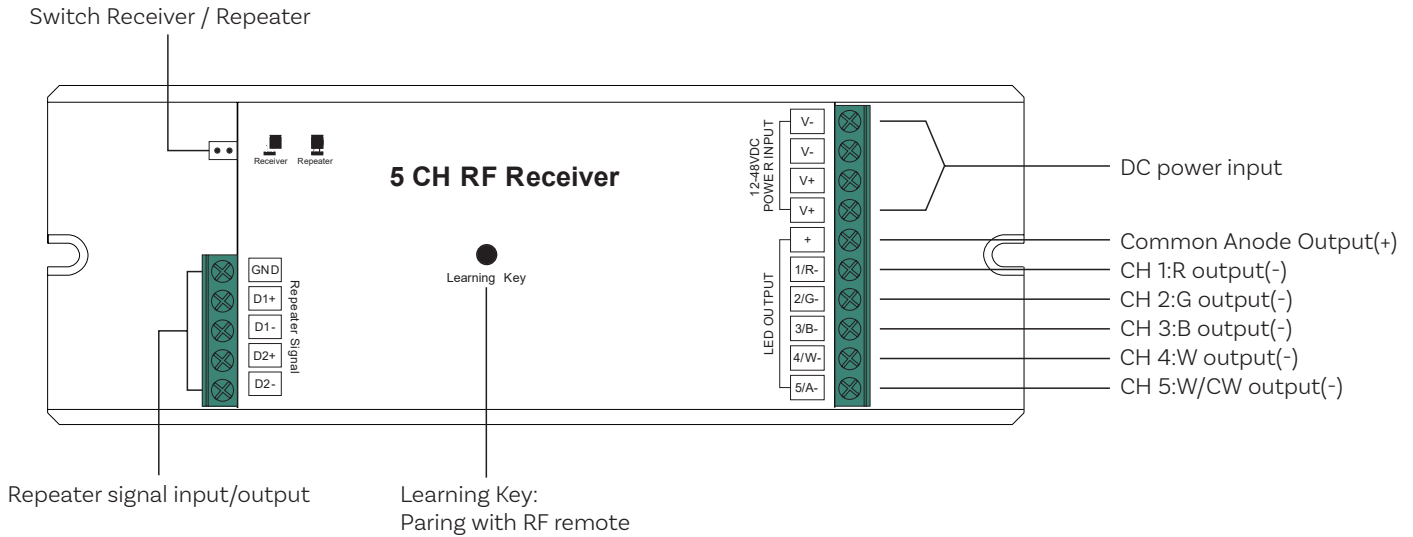

PRODUCT DATA

Input Voltage	Output Current	Output Power	Connector Rating	Wire Size	Remark	Size
12-48VDC	Max. 8A/CH@12V/24V Max. 6A/CH@36V Max. 4A/CH@48V	Max. 96W/CH@12V Max. 192W/CH@24V Max. 216W/CH@36V Max. 192W/CH@48V	Max. 20A	12-30AWG	Constant Voltage	7" x 2.3" x 1.1"

- Radio Frequency : 869.5/916.5/434mhz
- Waterproof grade: IP20

Safety & Warning

- DO NOT install with power applied to device
- DO NOT expose the device to moisture

Pair/delete the pairing with RF remote

1. Do wiring according to connection diagram.
2. Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with.
3. Delete the pairing:
 - (a) Wire up the RF receiver correctly, power on.
 - (b) Press and hold down the "Learning Key" button on receiver for over 3 seconds until the connected light flashes, which means well deleted.


Receiver/Repeater setting jumper:

One receiver can connect with multiple repeaters to realize perfect sync the sync distance can be over 100m with no volt drop.

RF 5 CHANNEL RECEIVER Installation Guide

WIRING DIAGRAM

1) When total load of each receiver is not over 20A

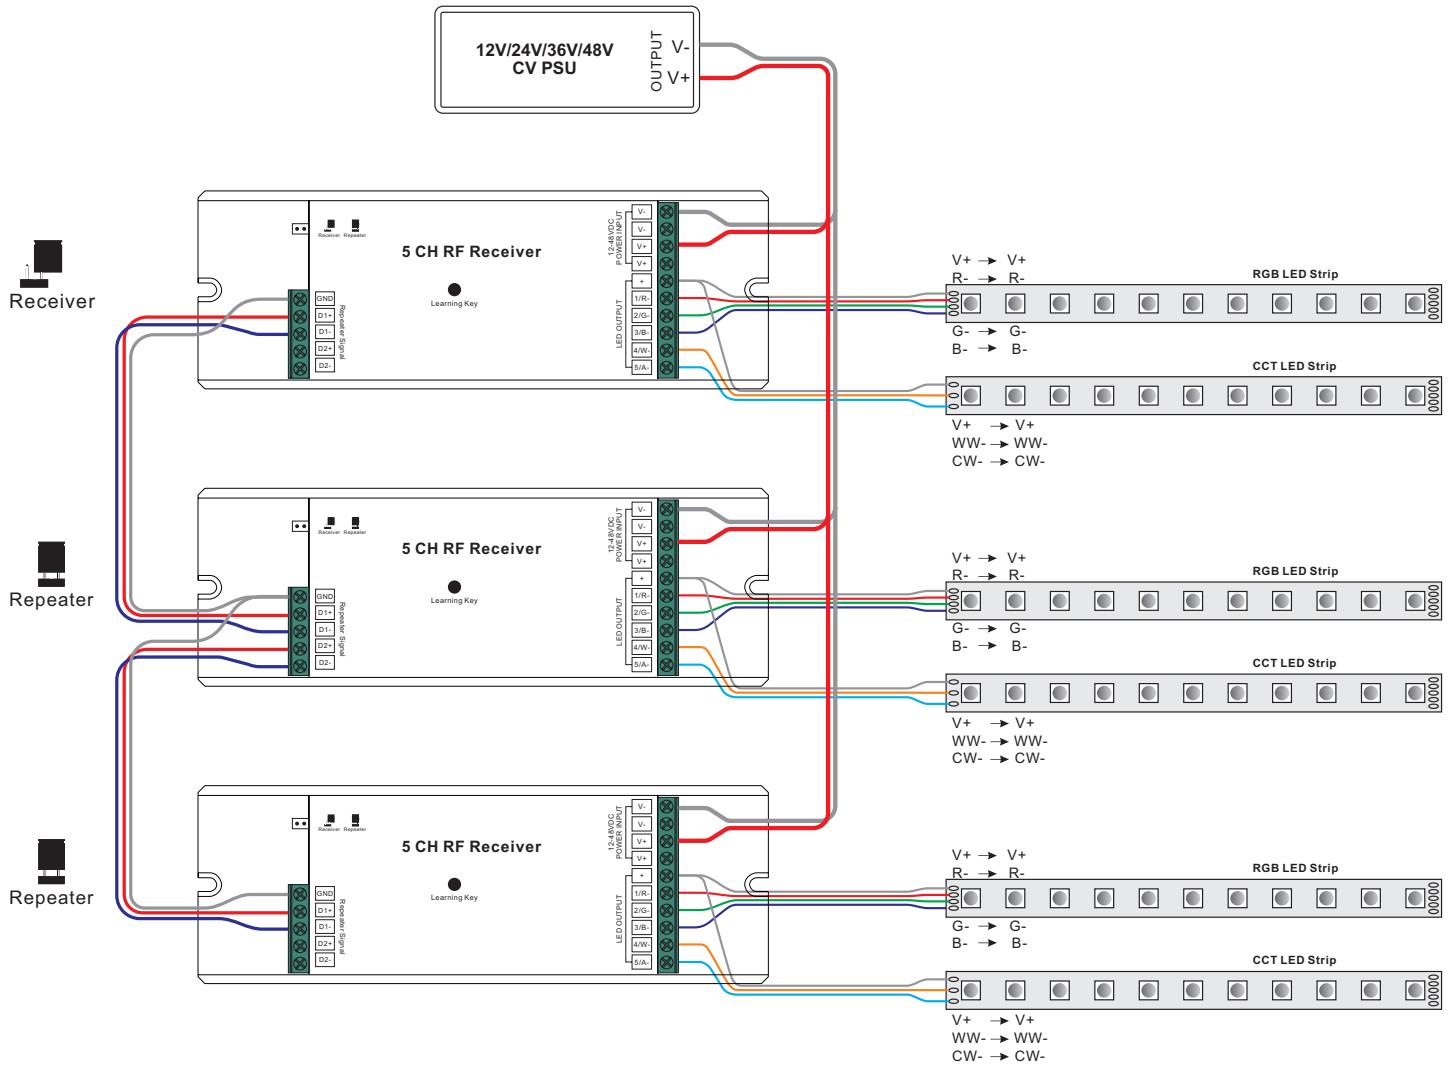

RF 5 CHANNEL RECEIVER Installation Guide

WIRE DIAGRAM

2) When total load of each receiver is over 20A

