
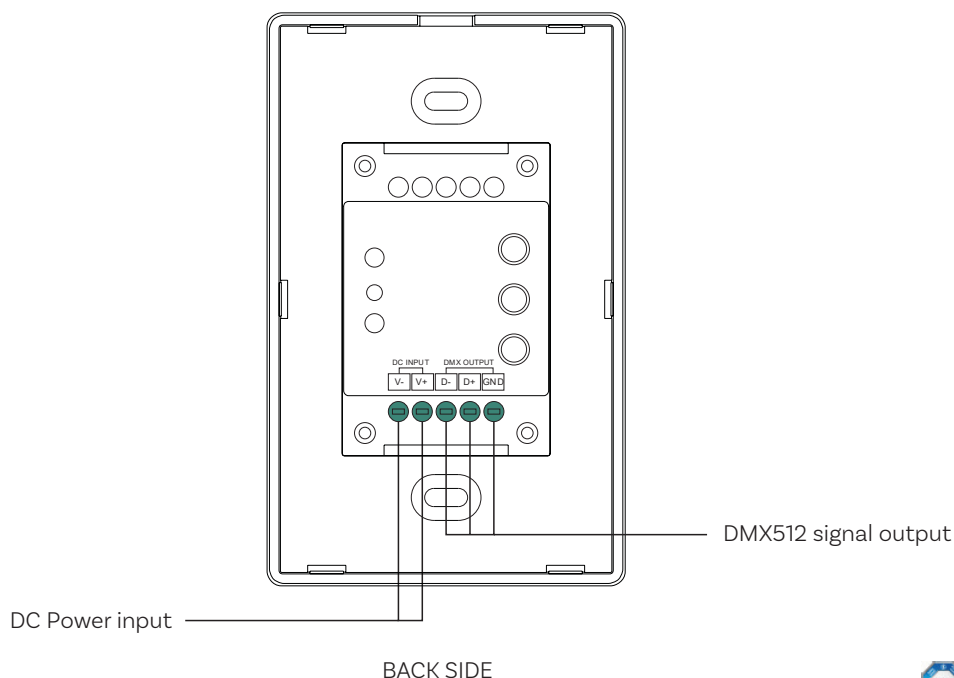


RGBWW Wall Controller Installation Guide

INSTRUCTION

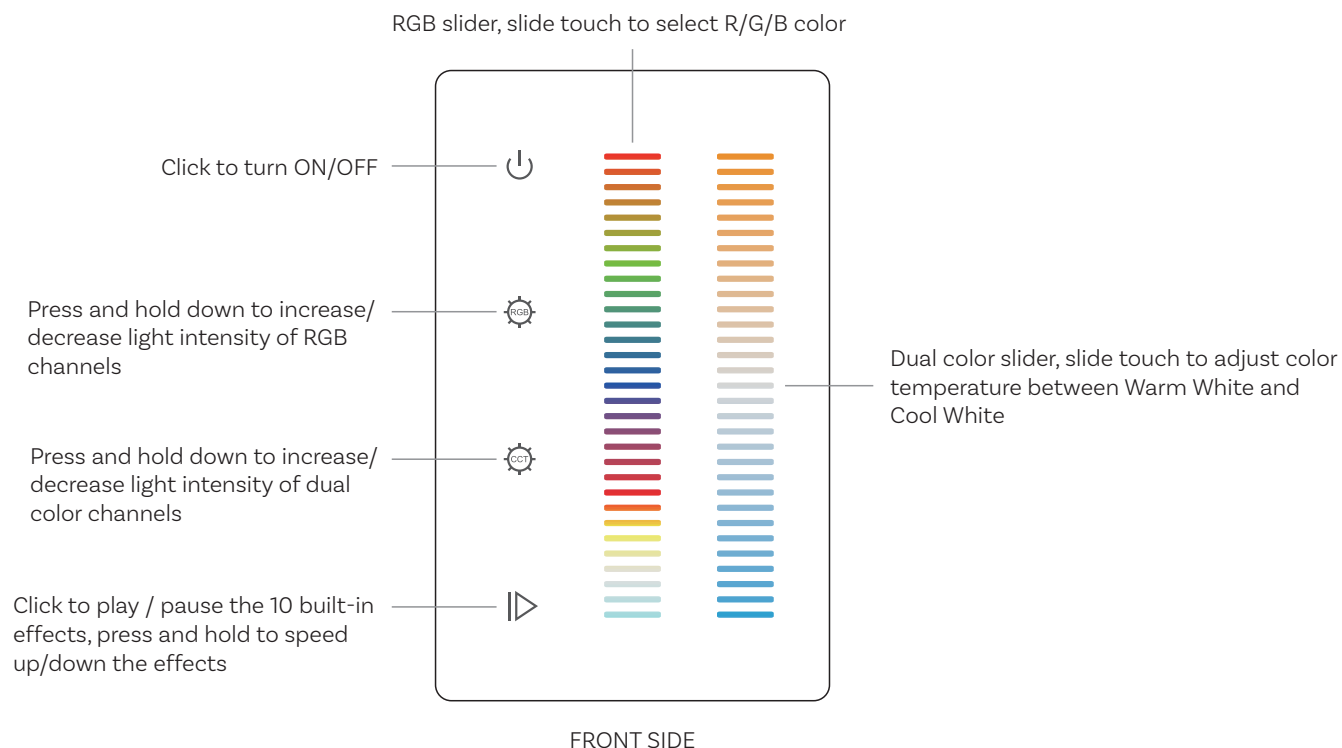


Output	DMX512 + RF signal
Power Supply	12-24VDC
Power consumption	<20 mA
Operating Temperature	0 - 40°C
Relative humidity	8% - 80%
Dimensions	2.9" x 4.7" x 1.1"

- ## Safety & Warning

-

RGBWW Wall Controller Installation Guide

WIRE DIAGRAM

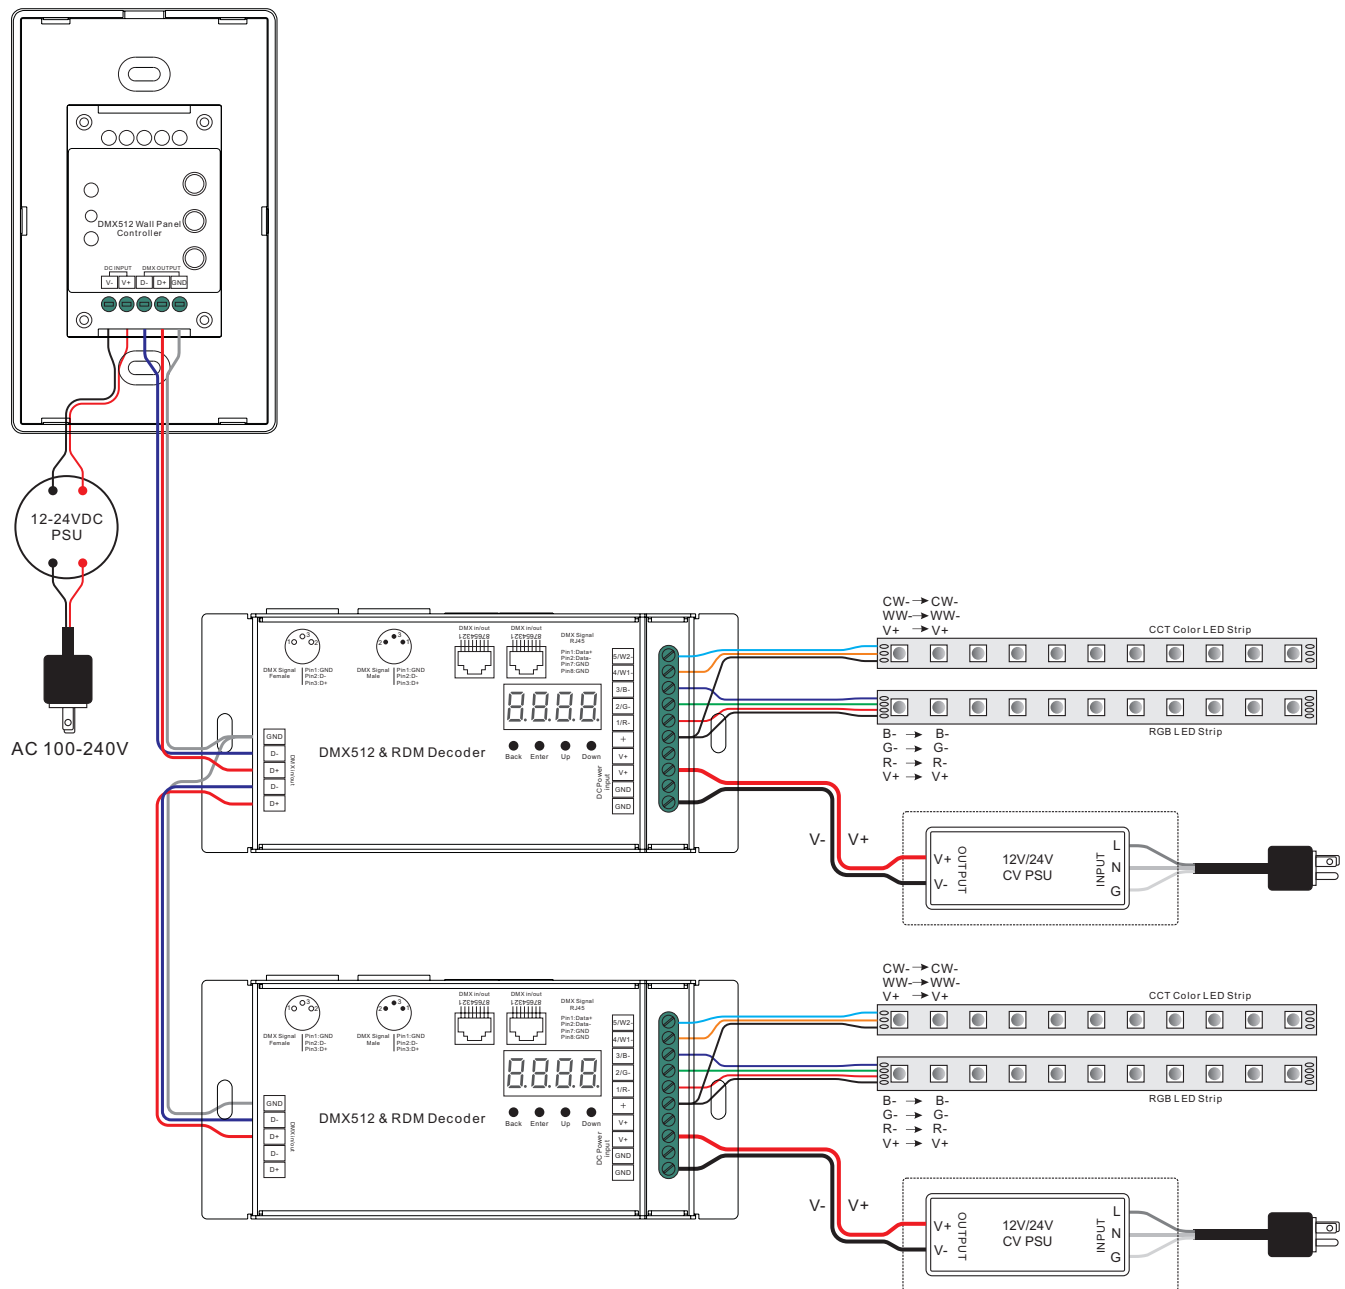


Set DMX Address

This DMX master controller can control many DMX decoders, please set all decoders' address as 001.

Note: one DMX decoder has 5 channels, so it occupies 5 DMX addresses 001, 002, 003, 004, 005.

RGBWW Wall Controller Installation Guide


PAIR WITH RF RECEIVER

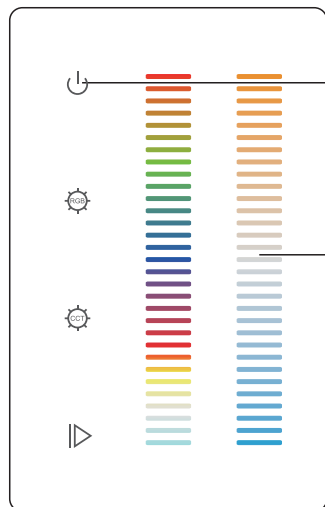

Step 1: Do wiring the RF receiver according to wiring diagram
(please refer to the instruction of RF receiver that you would like to pair with)

Step 2: Touch to turn on the controller, indicator of the controller turned blue

 Step 4: Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 3 successfully.



Step 3: Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status