
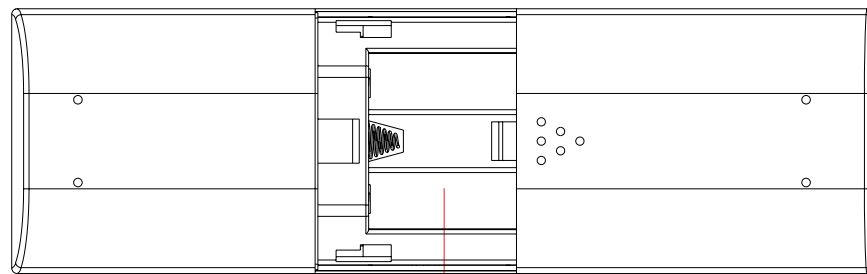


# RGBWW Hand Remote Installation Guide

## INSTRUCTION

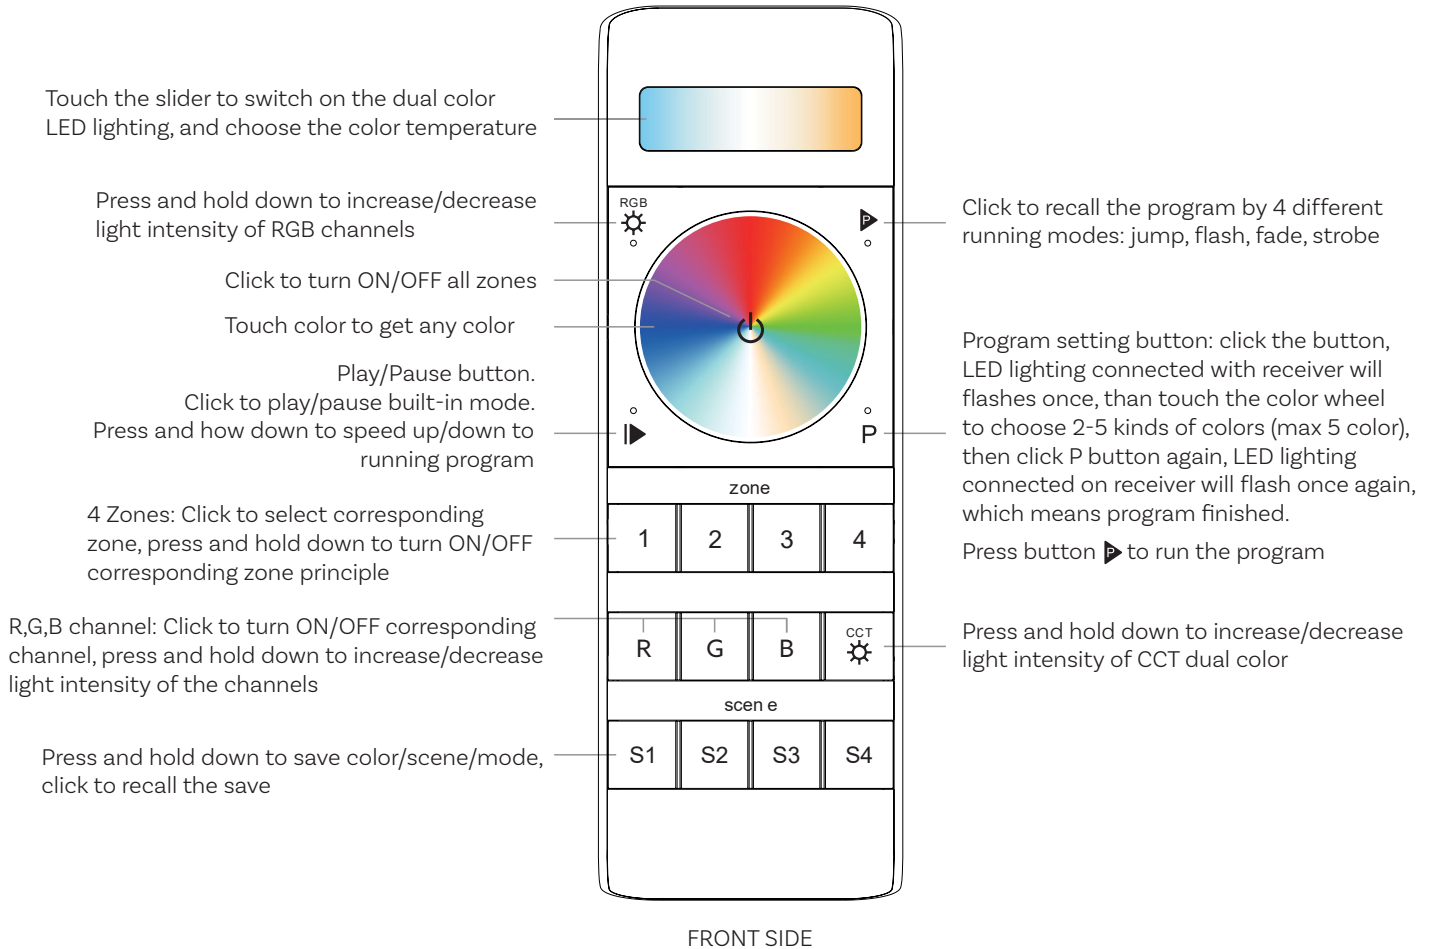

4.5V (3xAAA battery)

BACK SIDE



# RGBWW Hand Remote Installation Guide

## PRODUCT DATA


Output	RF Signal
Operation Frequency	869.5 / 916.5 / 434MHz
Power supply	4.5V (3xAAA battery)
Operating Temperature	0 - 40°C
Relative humidity	8% - 80%
Dimensions	6" x 2" x 0.75"

- Control 4 zones of RF receiver
- RGB + CCT color controller
- Compatible with universal series RF receiver
- 1 receiver can be paired by max 8 different remote control
- Waterproof grade: IP20

### Safety & Warning

- This device contains AAA batteries that shall be stored and disposed properly
- DO NOT expose the device to moisture

## PAIR WITH RF RECEIVER (METHOD 1)

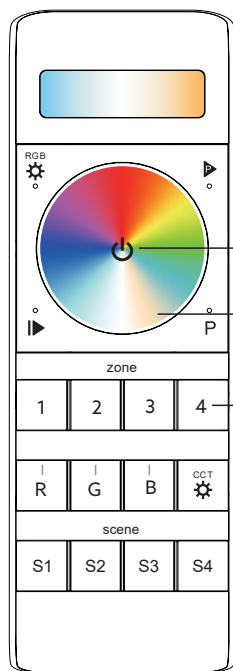

**Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)



**Step 3:** Power off and power on the receiver


**Step 2:** Click ON/OFF button to activate the remote

**Step 5:** Touch the color wheel, LED lights connected with RF receiver flicker once means the receiver is paired with zone 4 successfully

**Step 4:** Choose and click a zone number (e.g. zone 4)

# RGBWW Hand Remote Installation Guide

## PAIR WITH RF RECEIVER (METHOD 2)

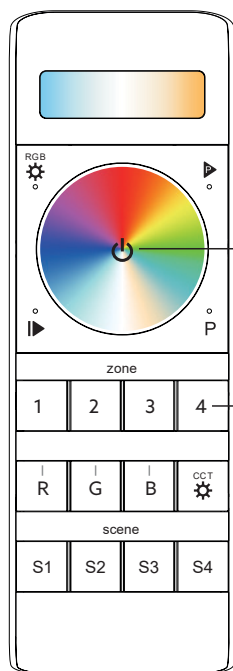

**Step 1:** Do wiring the RF receiver according to wiring diagram  
(please refer to the instruction of RF receiver that you would like to pair with)




**Step 3:** Power off and power on the receiver

**Step 2:** Click ON/OFF button to activate the remote

**Step 4:** Choose and click a zone number (e.g. zone 4) twice, the press and hold it continuously and quickly with 10 seconds, LED lights connected with RF receiver flicker once means the receiver is paired with zone 4 successfully

## PROGRAM HE RUNNING MODE

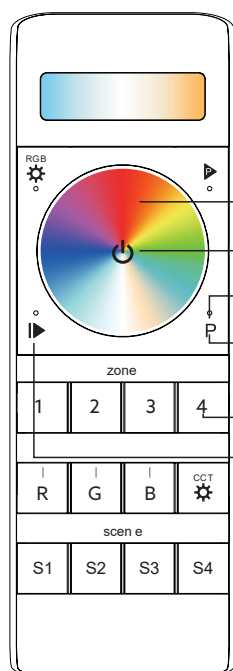

**Step 4:** Touch the color wheel to select 2 - 5 color (max 5 color)

**Step 1:** Click ON/OFF button to activate the remote

**Step 3:** Click button P, LED lighting connected with receiver will flash once

**Step 5:** Click button P again to confirm the selected color, LED lights connected with receiver will flash once again

**Step 2:** Choose and click one or multiple paired zone numbers (e.g. zone 4)


**Step 6:** Press to run the program

# RGBW Hand Remote Installation Guide


## MULTIPLE RECEIVER

If you use multiple receivers, you have two choices

Option 1: have all receiver in the same zone

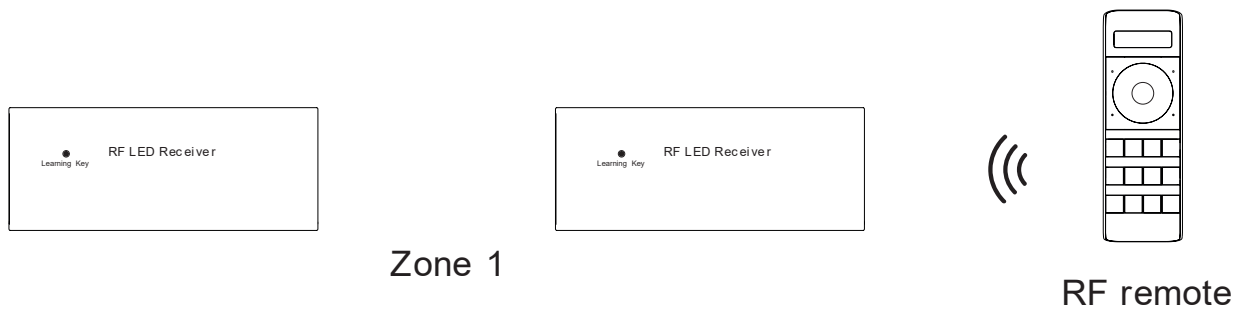

Option 2: have each receiver in a different zone, like zone 1, 2, 3, or 4

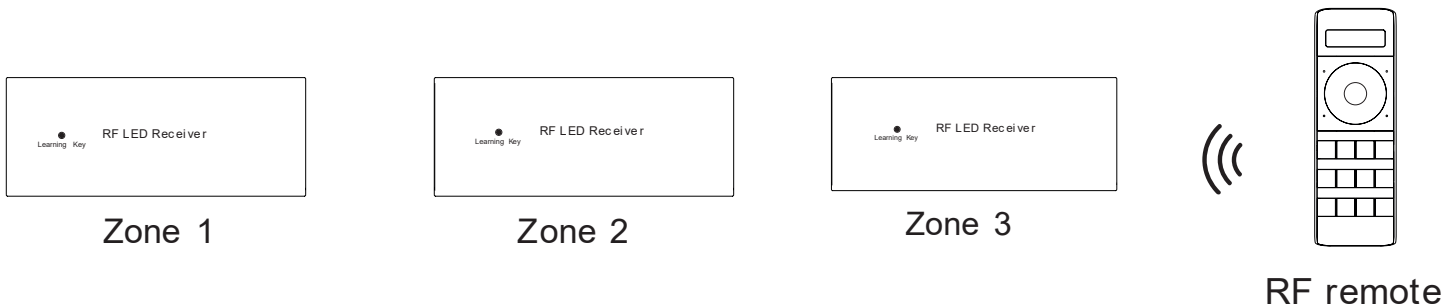

### How to stop running mode of single color LED light caused by RGBW sender interference:

1. When pairing single color LED light to a single color remote, it might be interfered and paired by nearby RGBW sender, which might control the single color light in to running mode. The running mode can not be stopped by the paired single color remote by delete pairing.
2. Then we need this remote, and pair the remote to the receiver via above **Pair twith RF receiver (Method 2)**, the touch the touch the color wheel to stop the running mode
3. Then delete pairing and pair the receiver to the single color remote again, it can be controlled by the remote again